



AL5815 PSPICE Model

The AL5815 macro-model provides a basic simulatable model of the device. To use the model follow these steps:

1. In OrCad Capture, add the AL5815_ENC.lib to both the Library and Model Libraries folders for your design hierarchy.
2. Then from the schematic capture window,
 - a. Select -> Add Parts
 - b. Then -> Add Library
 - c. And add the AL5815_ENC.OLB file

Now you can place the AL5815_ENC.OLB in a schematic. Set the two required input parameters: Tja and Ta. Tja is Theta-JA and Ta is the ambient temperature. The three remaining parameters: Sel5PinVf=0, Sel5PinEn=1, and Sel8PinEn=0 should not be changed. These parameters are used internally to configure the model.